




Users Guide& Instruction


PORTABLE PICKLEBALL NET SYSTEM

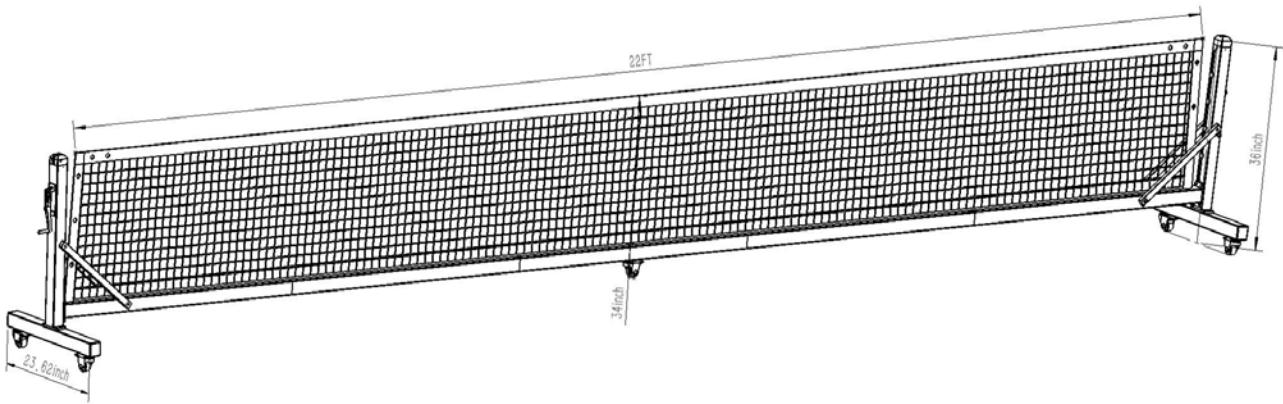

PARTS

| | | | |
|---|---|--|---|
|  |  |  |  |
| Winder post D x1 | Anchor post E x1 | Post support bar F x4 | Bottom bar A x2 |
|  |  |  |  |
| Bottom bar B x2 | Bottom bar C x1 | Internal connector x4 | Crank Handle × 1 |
|  |  |  |  |
| Tools | Castor G x4 | Center castor H x1 | Plastic caps x4 |
|  |  |  |  |
| M10x45 bolt x8 | M10x40 bolt x20 | Net ×1 | Center Strap ×1 |

SECTION 1: BASE CONNECTION INSTALLATION

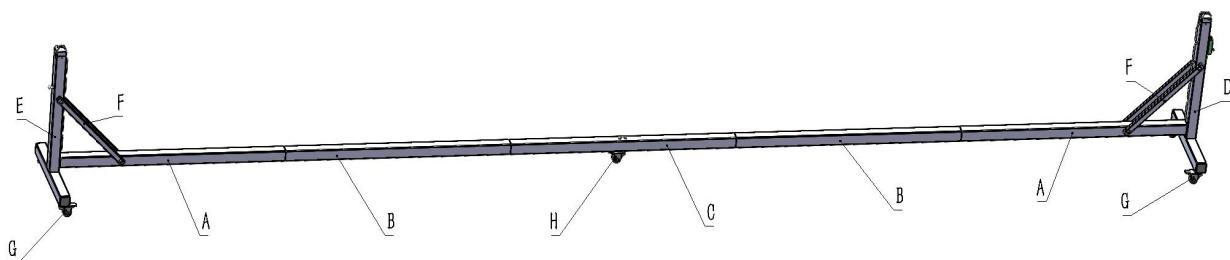

1. Parts required


Bottom bar A x2

Bottom bar B x2

Bottom bar C x1

For Parts Contact: Gym Floor Resource | Email: info@gymfloorresource.com | www.gymfloorresource.com
Internal connector Cmx40 | Restraint screw | Flat under head | M10x40 bolt x16

- Assemble bottom frame by sliding bottom bars onto internal connectors per layout drawing. Ensure no gaps.

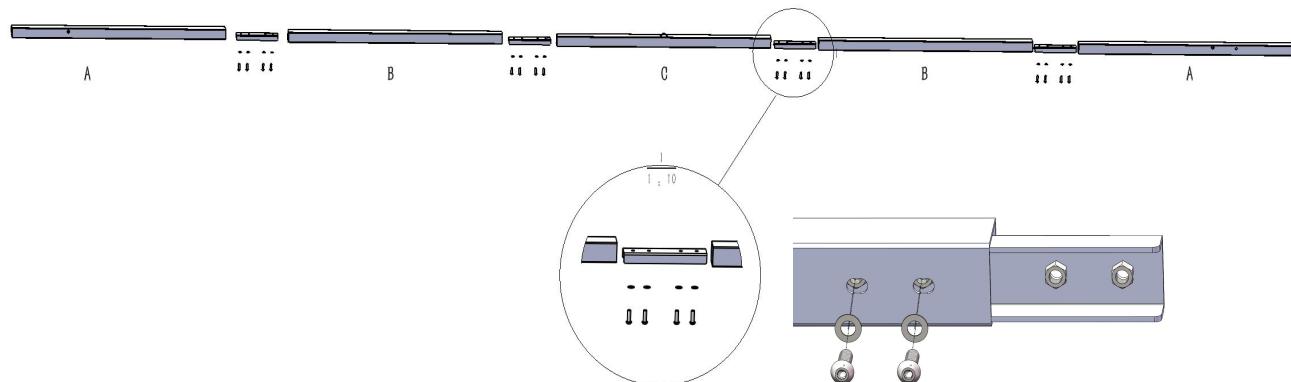


2. Parts required

Winder post D x1

Anchor post E x1

Bottom frame

- Lift the bottom tubes, use four M10x40 screws and flat washers to connect and fix to the winder post and anchor post.

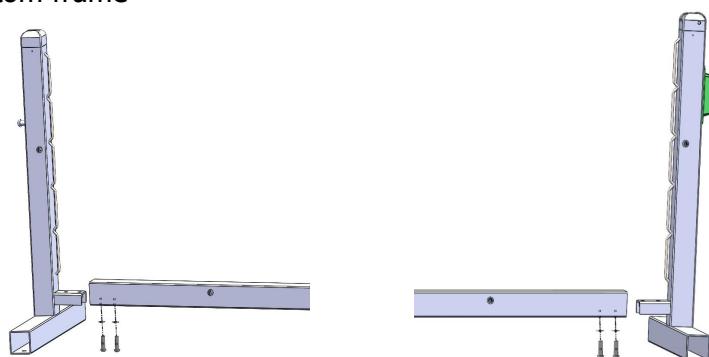


3. Parts required

Winder post D x1

Anchor post E x1

Post support bar F x4

- Fix the support pipe to the column and the connecting pipe with M10x45 screws and M10 flat washers

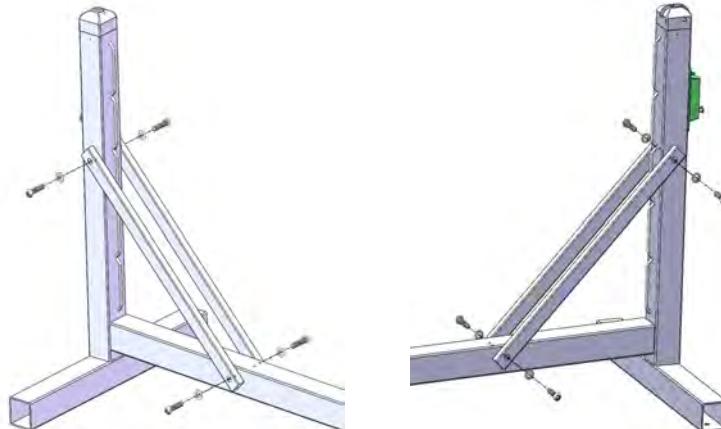

4. Parts required

Winder post D x1

Anchor post E x1

Castor G x4


Plastic caps x4

Install the four castors that have the step-down brakes.



- Lock the wheel ,take off the self-locking nut and place bolt up through hole.

- Place the self-locking nut on bolt and hand tighten.
- Clamp the self-locking nut using a 3/4" open or closed end box wrench.
- by pushing down on the brake lever ,turn the castor by hand and tighten it .
- Continue this process for all four wheels.

- Push on the black square plastic cap to keep the dirt out.

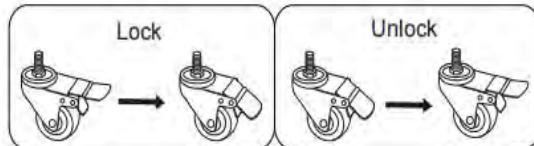

**Note: Lock the casters during the game.
Unlock the casters to move the net.**

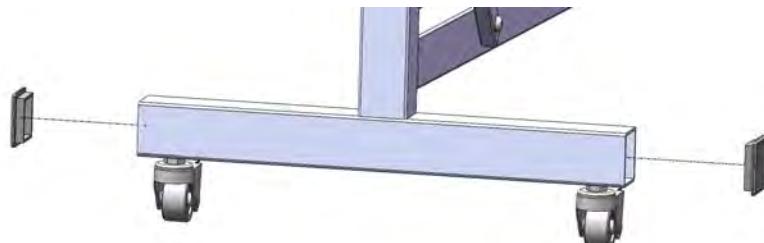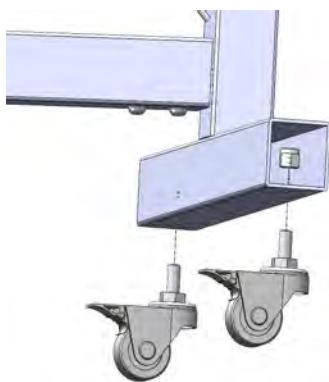


5. Parts required

Bottom frame (Bottom bar C x1)

Center castor H x1

- Lock the wheel and hand tighten.

- Tighten all the five wheels using the wrench or socket until they are all tight.

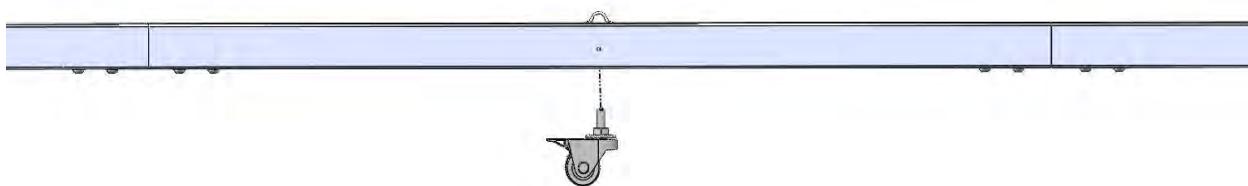


6. Parts required

Winder post D x1

Crank Handle x 1

- Install the handle

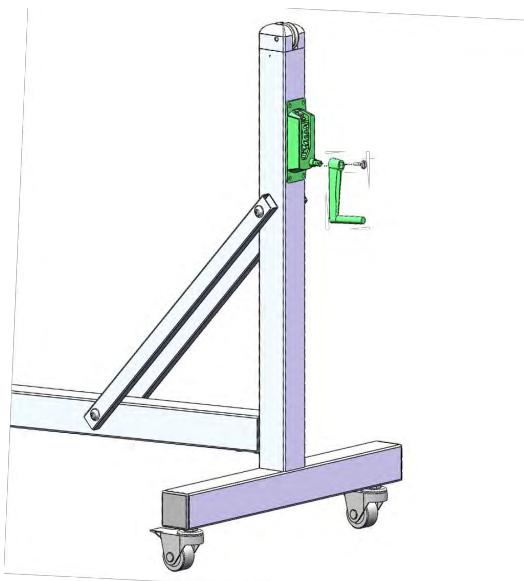

7. Parts required

Net x1

- Install the net

